


ANCHORING BOLT INSTRUCTION

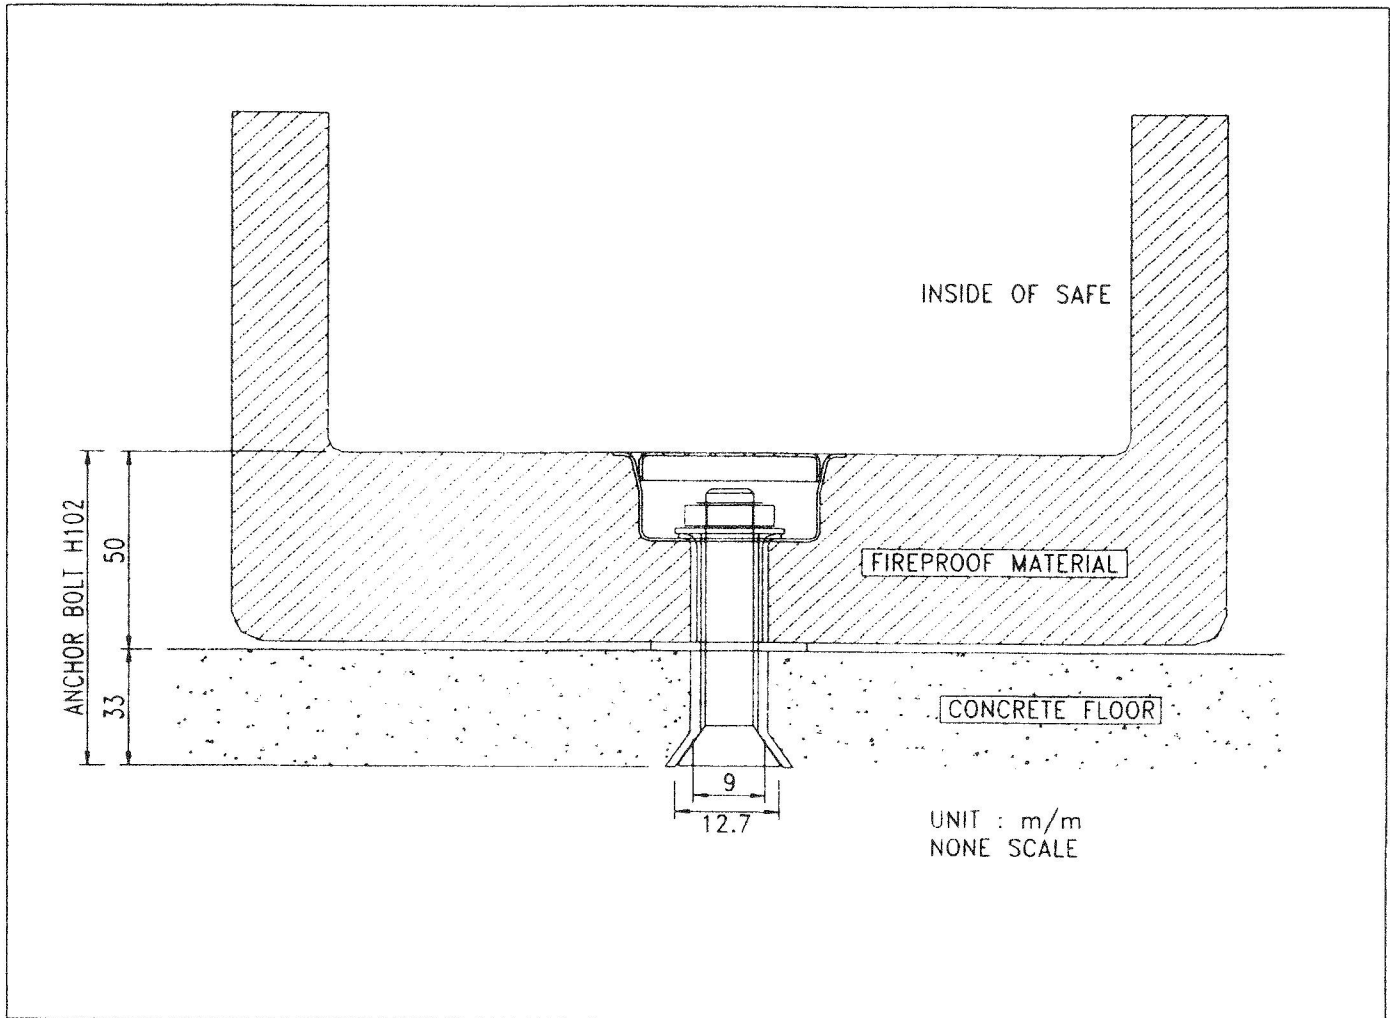

1. DRILL A HOLE ON THE CONCRETE FLOOR (14mm DIAMETER)
2. INSERT ANCHORING BOLT WITH ANCHORING PIPE ON.
3. PLACE THE SAFE ON TO THE ANCHORING BOLT WITH THE ANCHORING HOLE OF THE SAFES TO BE FITTED WITH THE ANCHORING BOLT.
(IF YOUR SAFES HAS RUBBER FEET, YOU SHOULD REMOVE THEM)
4. ASSEMBLE THE WASHER ,SPRING WASHER,AND NUT TO FIX THE BOLT.
5. PLACE THE ANCHORING HOLE COVER ON THE HOLE.

*INSTALLATION ANCHORING SYSTEM ON THE WOODEN FURNITURE IS , ALL THE SAME BUT THE LENGTH OF THE ANCHORING BOLT.
YOU SHOULD CUT IT NOT TO PROJECT OVER THE SAFE FLOOR.